

# 105U-G

## Installation Guide

### Statutory Requirements

EC: Unlicensed operation limits the radio power. High gain aerials may only be used to compensate for cable losses.


### 105U-G Installation

Power supply may be:

- (A) 12-24VAC <sup>1</sup>
- (B) 9-30VDC <sup>1</sup>
- (C) Supply battery

<sup>1</sup> Backup battery must be used if radio power over 2Watts.

### Aerial Installation

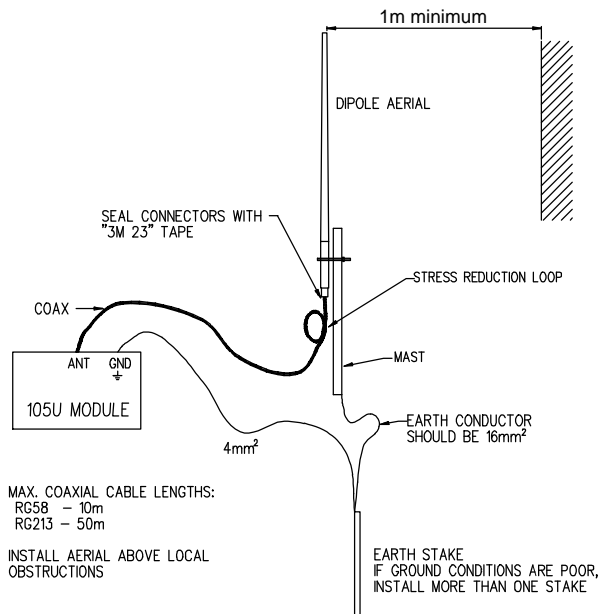

### WARNING !

#### EXPLOSION HAZARD

DO NOT DISCONNECT WHILE CIRCUIT IS LIVE UNLESS AREA IS KNOWN TO BE NON HAZARDOUS

### NOTES

1. DIO channels can be wired as either inputs or outputs.
2. All I/O must be SELV.

### CAUTION!

For continued protection against risk of fire, replace the module fuse only with the same type and rating

